


# SPARE PARTS LIST

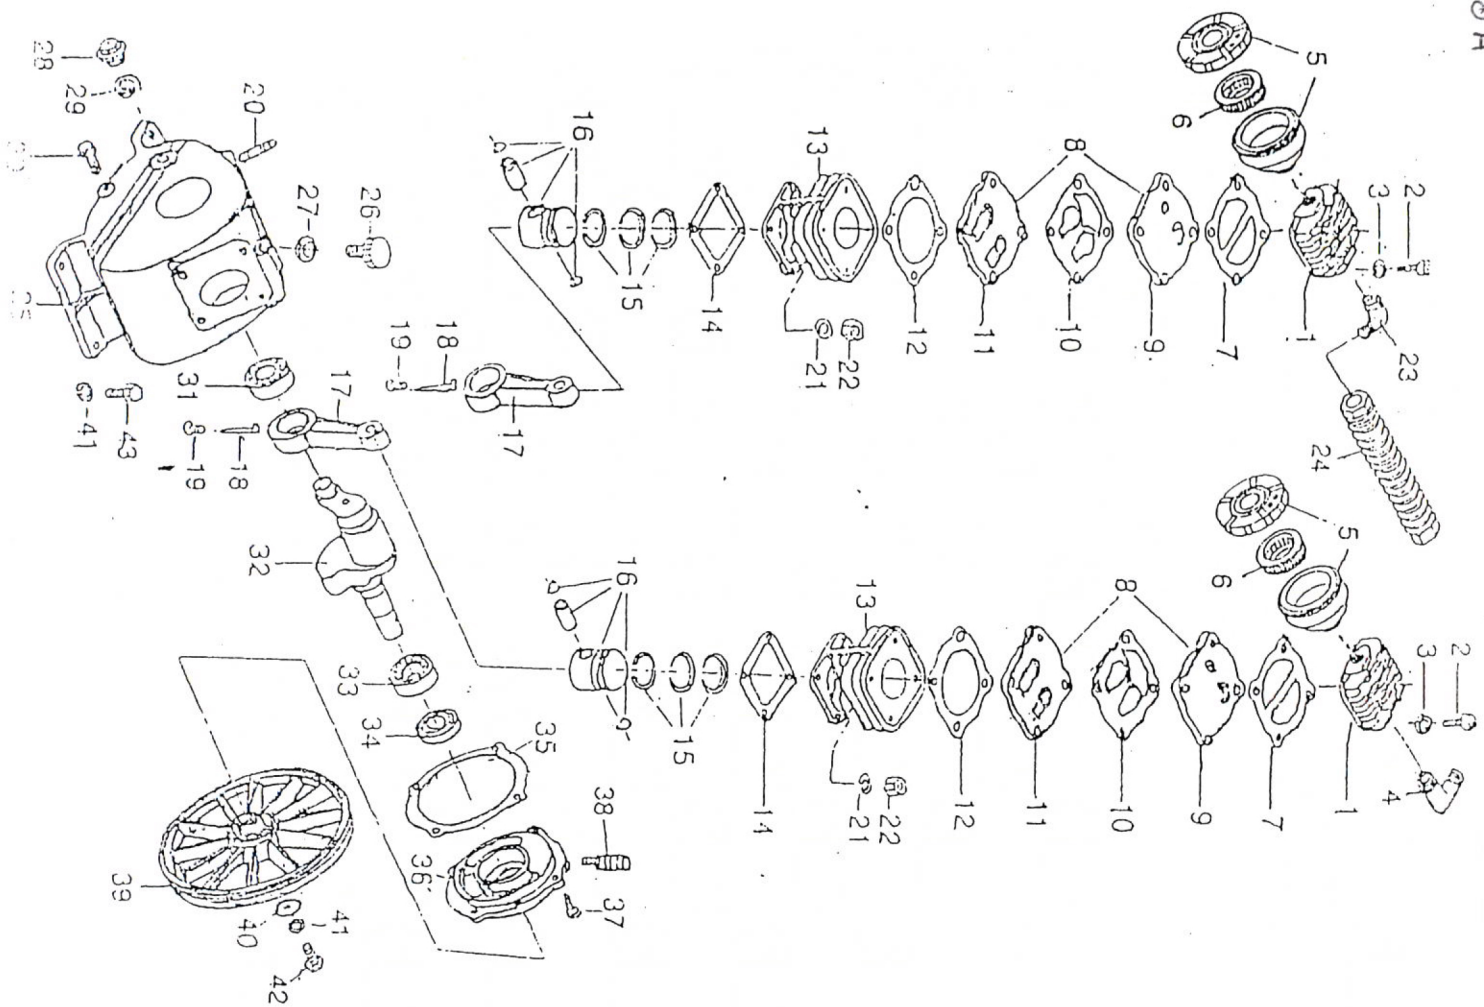

REF. NO.	DISCRIPTION	PART NO.	QT
1	Cylinder head	3101045	
2	In six-angle bolt	2B01-H06-040	
3	Spring washer	2B33-H06	
4	Exhaust elbow	2H06-04T0411	
5	Air filter	2140015	
6	Filter sieve	2142012	
7	Cylinder head packing	2C01-015	
8	Inlet/Exhaust valve assembly	*3B13-AC07	
9	Inlet valve assembly	*3B12-AC07	
10	Exhaust valve assembly	2C02-005	
11	Exhaust valve seat packing	*3B11-AC07	
12	Valve seat packing	2C03-008	
13	Cylinder	3201030	
14	Cylinder packing	2C04-003	
15	Piston ring set	*3B32-65	
16	Piston set	*3B31-65	
17	Rod	2315028	
18	Oil splasher	2317017	
19	Round head bolt(+)	2B02-FH5-010	
20	Double head screw	2B11-001	
21	Spring washer	2B33-H08	
22	Hexagon nut	2B20-FH08	
23	Exhaust three way pipe	2H09-04T0410411	
24	Exhaust tube set	*3B2-04-0240	
25	Crankcase	3301015	
26	Oil filling plug	2319003	
27	Oil filling assembly packing	2C11-005	
28	Oil sight gauge	2303004	
29	Oil sight gauge packing	2G11-003	
30	Oil draining plug	2H33-001	
31	Bearing	2H35-6204	
32	Crankshaft	3304038	
33	Bearing	2N35-62052	
34	Oil seal	2N50-TC24-47-07	
35	Rear bearing seat packing	2C06-008	
36	Rear bearing seat	3311015	
37	Out six-angle bolt	2B00-SH08-020	
38	Breathing cover	2321002	
39	Pulley	3PBA-105A124	
40	Plate washer	2B30-08-35-35	
41	Spring washer	2B33-H08	
42	Out six-angle bolt	2B00-SH08-035A	